


# Dry Snap™ Under Deck Fan and Light Installation Sheet


## STEP 1

Install pressure treated board to joist and flush with the top side of panel.

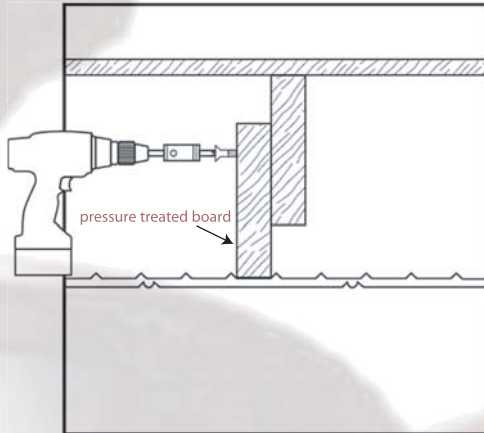


## STEP 2

Drill hole in panel with 13/16" spade bit.

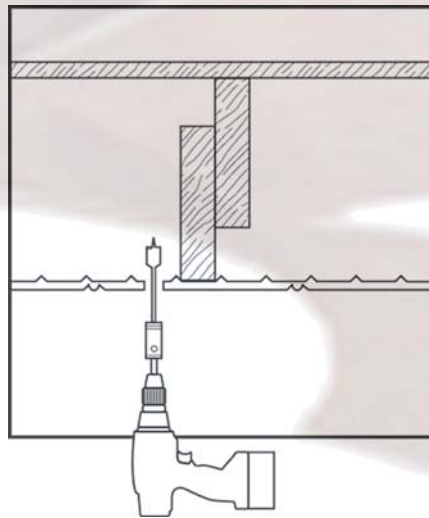


## STEP 3

Install 1/2" flex conduit and clamp. Flex conduit should be flexed over and clamped to prevent water from entering open end. Install Saf-T-Pan.

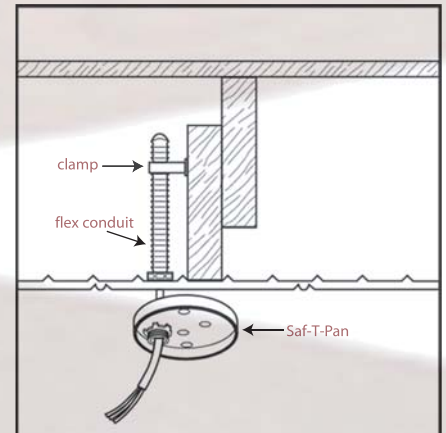


## STEP 4

After installing Saf-T-Pan and 3/4" nut to lock down the conduit, apply caulk to prevent leakage.

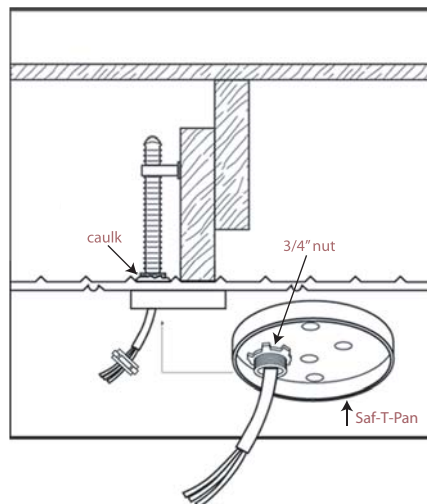

## STEP 5

Install Saf-T-Pan to joist and install fan or light fixture.

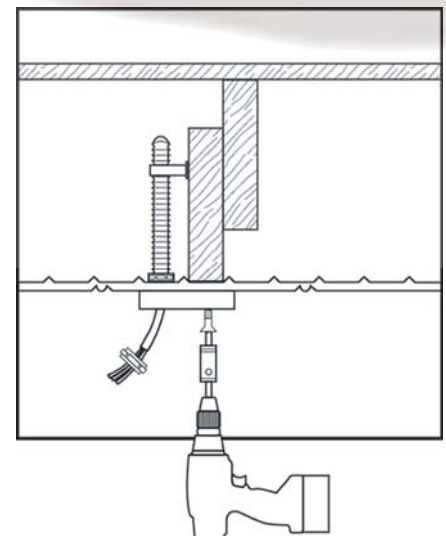

450 Richardson Drive  
Lancaster, PA 17603  
800.347.2586  
[www.drysnap.com](http://www.drysnap.com)